

Recommended Process for Disabling the Console Fan on

The console fan can not be disabled in the console settings, but can be manually disabled by disconnecting the internal fan cable.


## **SCYBEX** Equipment

## **Issues Associated with Fan Disconnection**

- ➤ The "alternate method" described in the Knowledge ➤ Base article Cybex 770, 790 Touchscreen Calibration (press and hold the "Fan" key for 3 seconds) intended for calibrating a non-responsive touchscreen will be made ineffective once the fan cable has been disconnected.
- If the "alternate method" for calibrating a nonresponsive touchscreen is needed, the reversal of the 2 Step Fan Disconnection Process below will be required.
- The fan will not function once disconnected.


## 2 Step Fan Disconnection Process

 Remove the back cover by removing the four Screws (3) securing Back Cover (2) to Console Assembly (1) using a #2 Phillips Screwdriver.

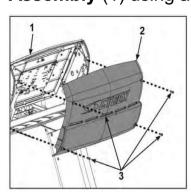

Item	Description	Qty.
1	Console Assembly	1
2	Back Cover	1
3	Screws	4

 Unplug the Fan Cable (1) and unlatch the J19 Connector (3) from the MCC board(2)

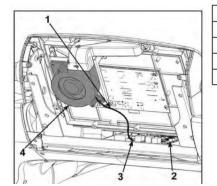

Item	Description	Qty.
1	Fan Cable	1
2	MCC Board	1
3	J19	1
4	Fan	1







For access to the related Knowledge Base articles, please use the following links:

Cybex 770, 790 Series Console Fan Details
Knowledge Base Article Link

Cybex 770, 772, 790 Touchscreen Calibration Knowledge Base Article Link

## Personal Protection Equipment (PPE):

Equipment worn to minimize exposure to hazards that cause serious workplace injuries or illnesses.







Total Tools Required for the procedures on this Job Aid.



Total Time Required for the procedures on this Job Aid.



Total People Required for the procedures on this Job Aid

