

Technical Information for our Service Providers and Dealers

Product Introduction Cybex Legacy 750T Treadmill

The Cybex Legacy 750T is our newest treadmill and is now available. The specifications are listed below.:

Length: 80" (204 cm). **Width:** 34" (86 cm). **Running Area:** 22" x 62" (56 cm x 157 cm).

Weight of Product: 410 lbs. (186 kg). **Shipping Weight:** 440 lbs. (200 kg).

Speed Range: 0.5 to 15.6 mph (0.8 to 25.1 kph) in 0.1 mph or 0.1 kph increments.

Incline Range: -3 to 15% grade.

Manual Mode: Yes.

Programs: Quick Start plus Manual, Weight Loss, Rolling Hills, Hills, Pikes Peak, Hill Interval 1:1, Hill Interval 1:2, Hill Interval 1:3, Cardio, HR Control, Eight Fitness Tests and Nine Custom Programs.

Standard Features: Safety Sentry™, Contact Heart Rate, Polar® wireless heart rate (chest strap not included), CSAFE, frame color choices include White Texture, Black Texture, Silver Vein, Black Chrome and Platinum Sparkle.

Optional Features: Unlimited custom colors available.

Power Requirement: Grounded, dedicated circuit and one of the following:

- 100 VAC, 50/60 Hz, 20A.
- 115 VAC, 60 Hz, 20A
- 220 VAC, 60 Hz, 15A.
- 230 VAC, 50 Hz, 15A
- 230 VAC, 50 Hz, 13A.

Motor: 3.0 hp continuous, 6.0 hp peak, AC, Brushless.

Emergency Stop: Pull the emergency stop key (e-stop).

Maximum User Weight: 400 lbs. (181 kg).

Options: Embedded A/V channel and volume controls and video mount bracket.

Transport and Delivery Notice Legacy 750T Treadmill

The elevation motor and On/Off switch on the 750T extend beyond the frame and are susceptible to damage from handling during transport and delivery.

Using a forklift or pallet jack:

When moving the treadmill in the shipping container it is important that the forklift forks span the full width of the skid to ensure proper weight distribution. If the forks do not span the full width of the shipping container it could distribute a portion of the weight of the treadmill onto the elevation motor resulting in damage.

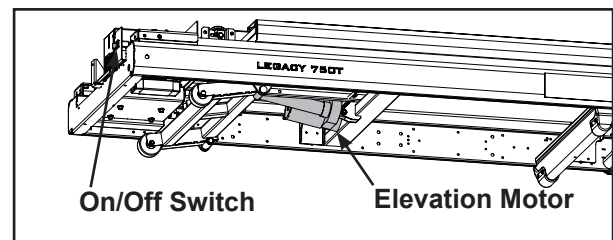


Figure 1

Using a dolly or other moving equipment:

Once the treadmill is out of the packaging the installers need to be aware that the elevation motor is exposed under the treadmill. The On/Off switch is also exposed at the front of the unit.

When using a dolly or similar device to move the treadmill make sure that it is supported by both side rails. Do not let the elevation motor or On/Off switch support any of the weight of the treadmill.

If the elevation motor or On/Off switch has been damaged, contact Cybex Customer Service at 888-462-9239.