


	<b>Service Replacement Instructions</b>	Assy. Inst. No: <b>M1027</b>	Revision <b>E</b>


Operation Description: <b>AC5/AC5M/DC1000 TOUCHSCREEN SET-UP AND CALIBRATION</b>	Current Sub Assy. of: <b>AC5/AC5M DC1000</b>	Originator MP	Approved Date 12/12/16
---	---	------------------	---------------------------

<b>Required Parts</b>			
-----------------------	--	--	--

PART NO.	DESCRIPTION	ITEM	QTY.
A6625	AC5-INT TREADMILL, TOUCHSCREEN CONSOLE		
A4897TS	DC1000-INT TREADMILL, TOUCHSCREEN CONSOLE		

Required Tools	Tool No:

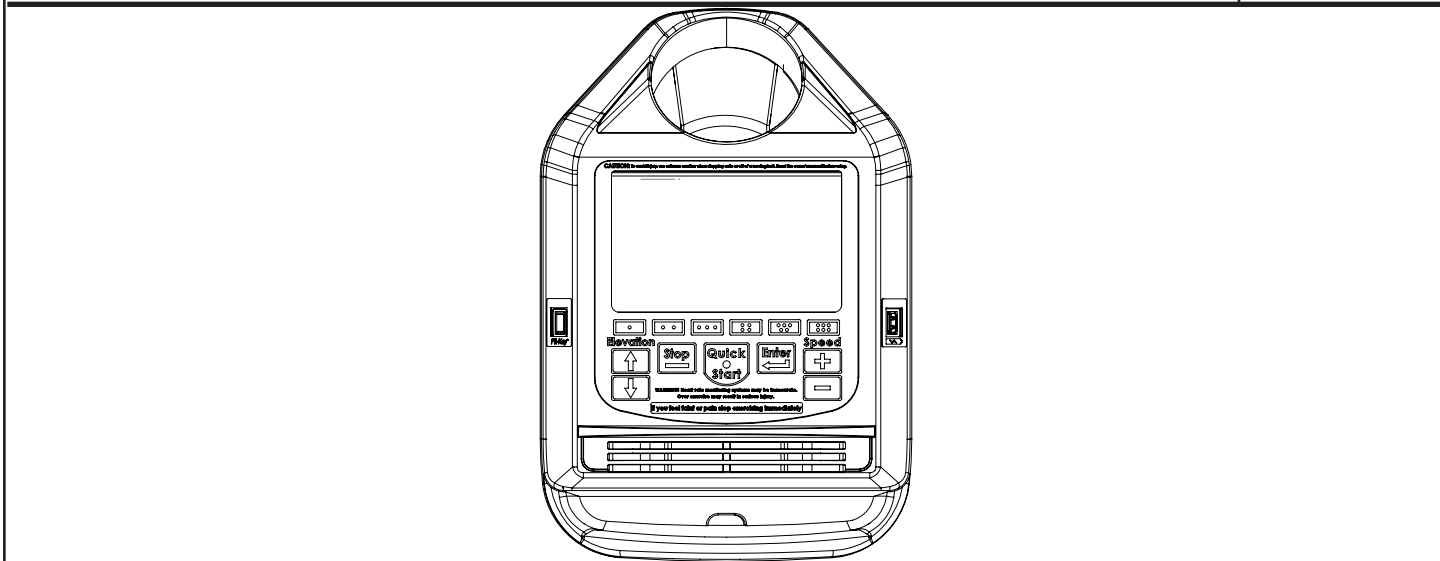


	<b>Service Replacement Instructions</b>	Assy. Inst. No: <b>M1027</b>	Revision <b>E</b>
Operation Description: <b>AC5/AC5M/DC1000 TOUCHSCREEN SET-UP AND CALIBRATION</b>	Current Sub Assy. of: <b>AC5/AC5M DC1000</b>	Originator MP	Approved Date 12/12/16

## Step 1: Accessing the Set-Up Mode To select A Machine Model

After installing a treadmill touchscreen console, the next step will be to select the model type for the treadmill it is mounted too. A calibration procedure will then follow to complete the process.


### Method 1: Touching The Screen In Sequence:


- (1) Touch the **upper left corner of the screen**,
- (2) Then touch the **left side of the “Quick Start” icon**,
- (3) Finally touch the **upper left corner of the screen again**.

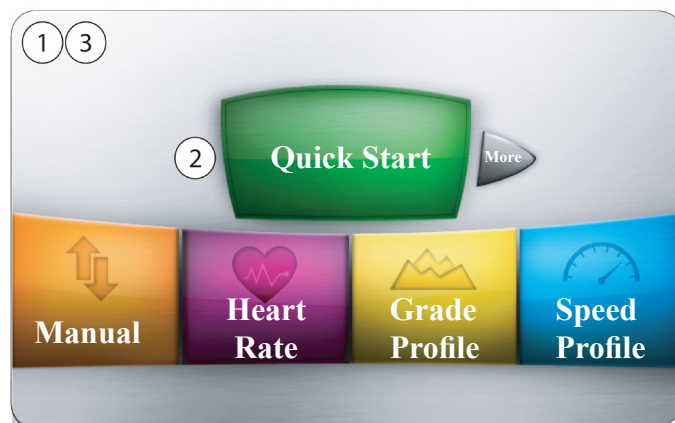

### Method 2: Pressing the Tactile Buttons In Sequence


- (1) Press the [Stop] key,
- (2) Then press the [Two Dot] key,
- (3) Then press the [Five Dot] key,
- (4) Finally press the [Six Dot] key.

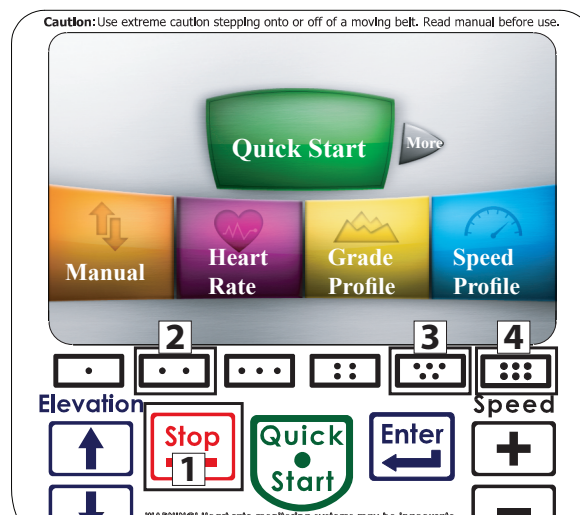

	<b>Service Replacement Instructions</b>	Assy. Inst. No: <b>M1027</b>	Revision <b>E</b>
Operation Description: <b>AC5/AC5M/DC1000 TOUCHSCREEN SET-UP AND CALIBRATION</b>	Current Sub Assy. of: <b>AC5/AC5M DC1000</b>	Originator MP	Approved Date 12/12/16


## Step 1: Overlay Matrix Selection


The screen will change to show the first three categories, then highlight the category “Overlay” by touching the “Up” or “Down” arrows on the right side of the screen.

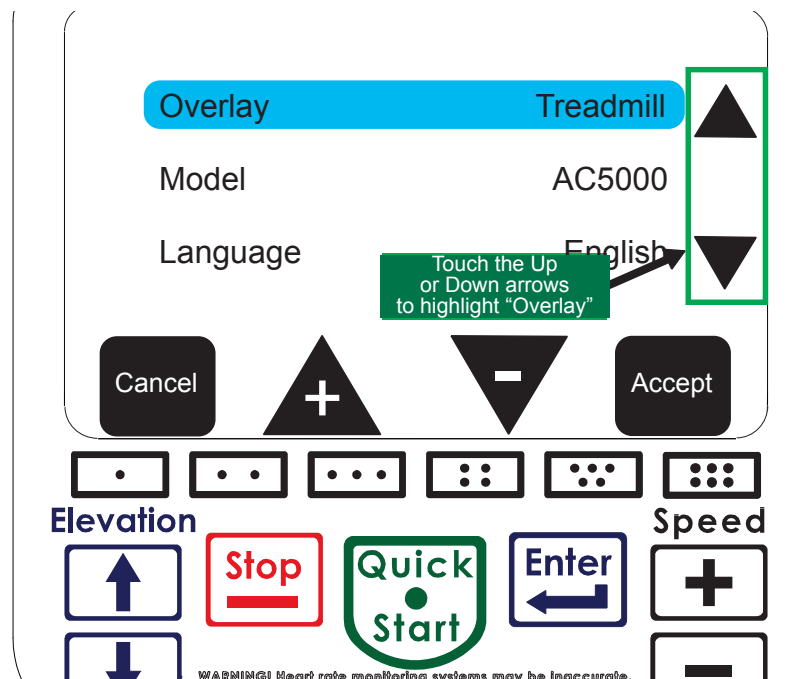

## Step 2: Selecting Treadmill For The Overlay Matrix


Touch either the “+” or “-” arrows to show “Treadmill” for the “Overlay” selection.

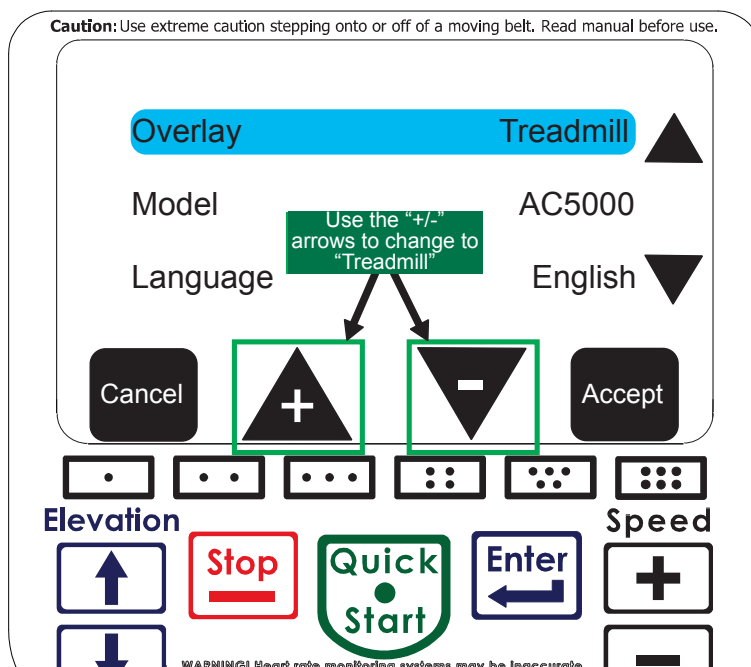

	<b>Service Replacement Instructions</b>	Assy. Inst. No: <b>M1027</b>	Revision <b>E</b>
Operation Description: <b>AC5/AC5M/DC1000 TOUCHSCREEN SET-UP AND CALIBRATION</b>	Current Sub Assy. of: <b>AC5/AC5M DC1000</b>	Originator <b>MP</b>	Approved Date <b>12/12/16</b>


### Step 3: Selecting The Model


Touch the “Down” arrow to highlight the “Model” category, then press the “+” or “-” arrows to select the type of treadmill the console is being attached too.

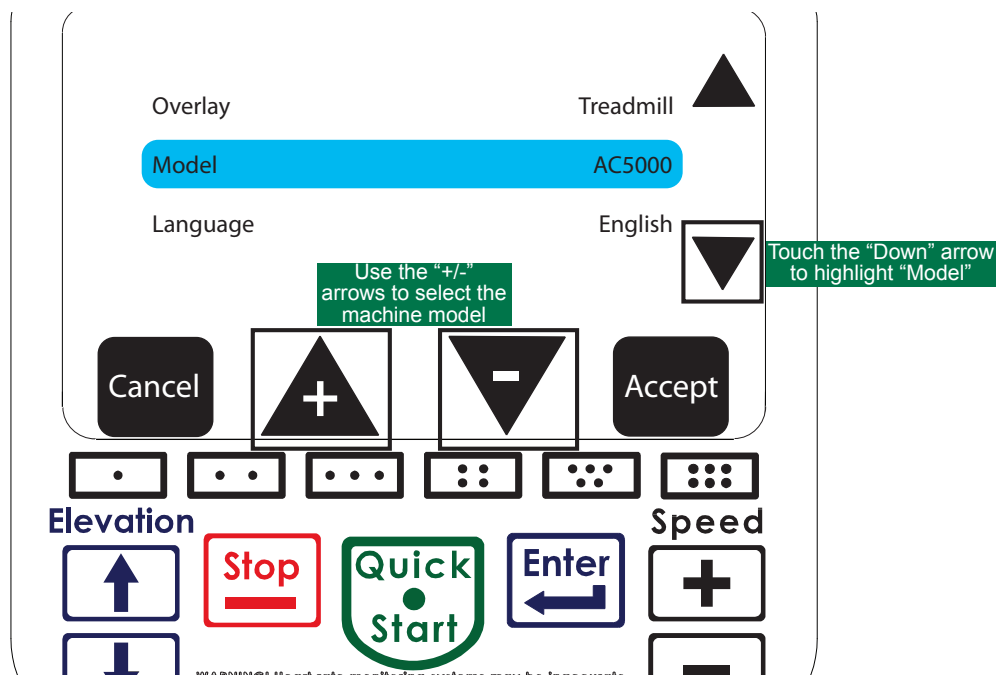

### Step 4: Saving The Changes

Touch “Accept” to save the changes and the screen will return to the main menu.

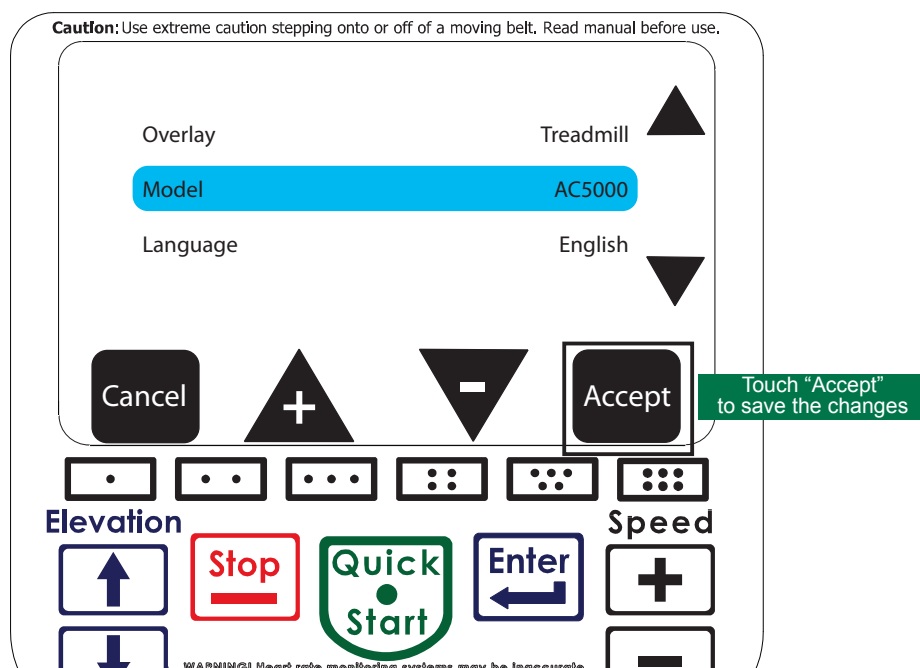

	<b>Service Replacement Instructions</b>	Assy. Inst. No: <b>M1027</b>	Revision <b>E</b>
Operation Description: <b>AC5/AC5M/DC1000 TOUCHSCREEN SET-UP AND CALIBRATION</b>	Current Sub Assy. of: <b>AC5/AC5M DC1000</b>	Originator MP	Approved Date 12/12/16

## ELEVATION CALIBRATION


Once the machine model is selected, an elevation calibration procedure will be necessary to complete the process.


### Step 1: Accessing the Test Screen

To access the Test Screen, in sequence:


- (1) Press the [STOP] key, then
- (2) Press the [Five Dot] key, then
- (3) Press the [One Dot] key, then
- (4) Finally press the [Two Dot] key.

**Caution:** Use extreme caution stepping onto or off of a moving belt. Read manual before use.

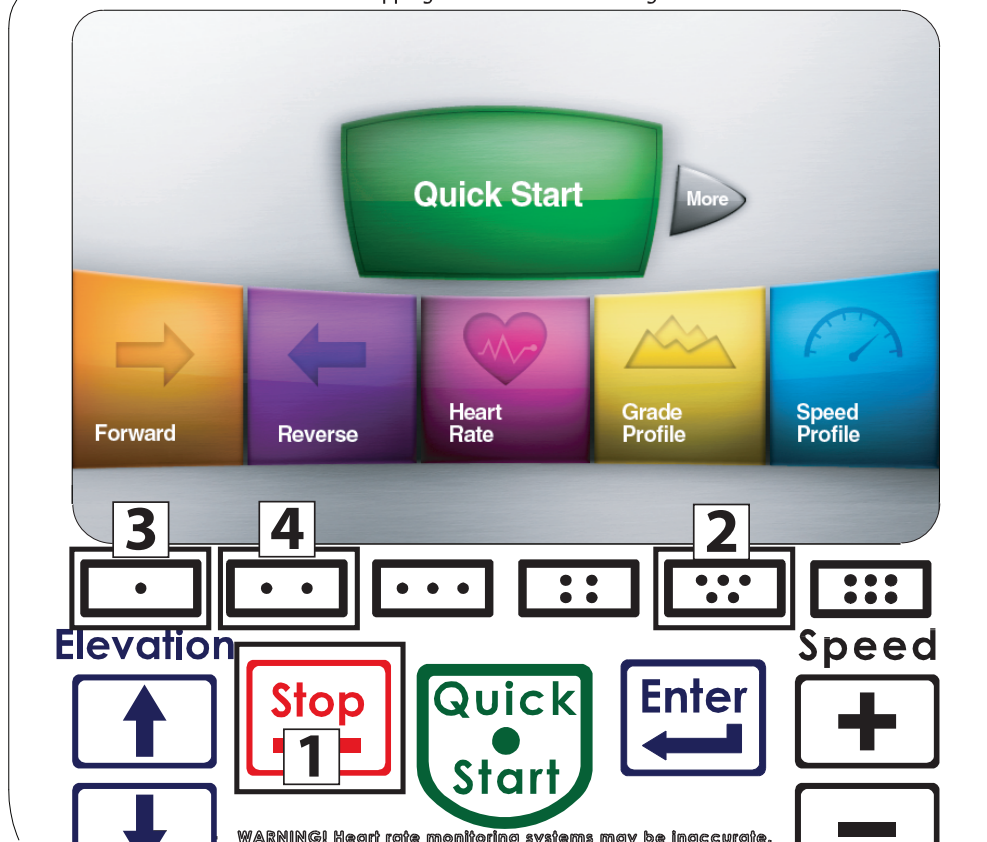


	<b>Service Replacement Instructions</b>	Assy. Inst. No: <b>M1027</b>	Revision <b>E</b>
Operation Description: <b>AC5/AC5M/DC1000 TOUCHSCREEN SET-UP AND CALIBRATION</b>	Current Sub Assy. of: <b>AC5/AC5M DC1000</b>	Originator <b>MP</b>	Approved Date <b>12/12/16</b>

The following screen will appear.

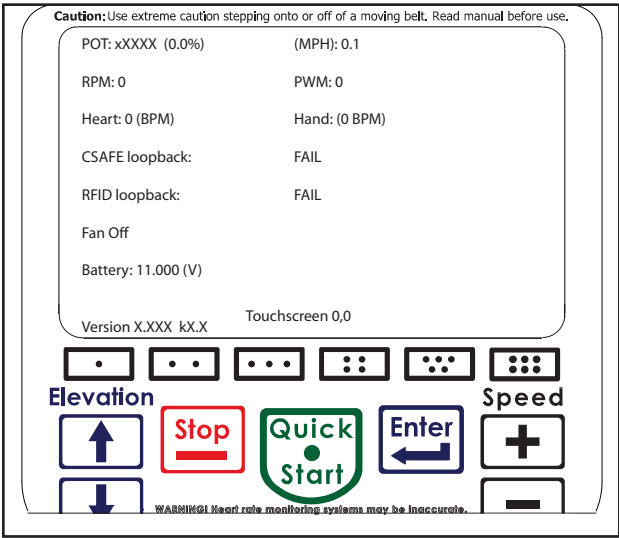


## Step 2: Start Cailbration Process

Press the “Elevation [Up Arrow] and [Down Arrow] keys at the same time to begin the cailbration process.

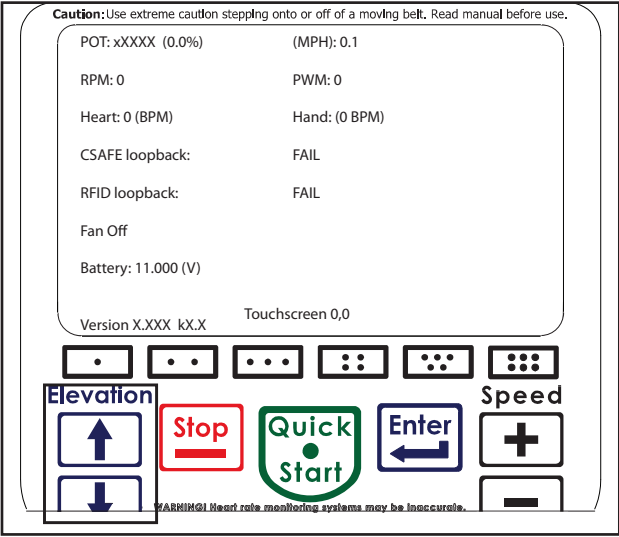

The “Pot” category will highlight yellow, this indicates that the calibration is in process (machine will elevate up, then back down).

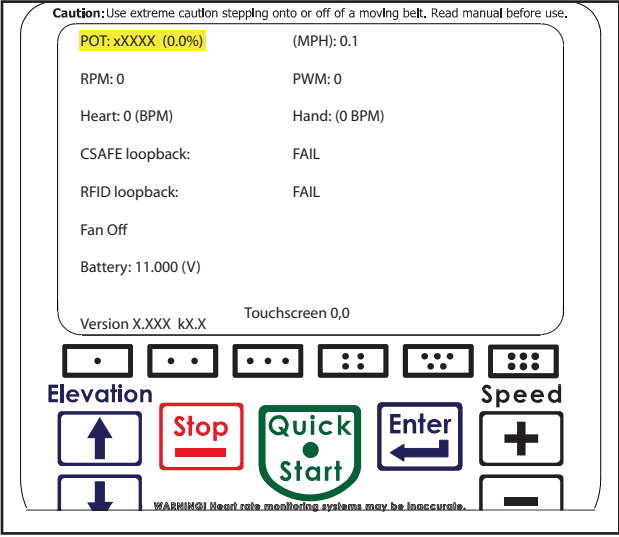





Operation Description: AC5/AC5M/DC1000 TOUCHSCREEN SET-UP AND CALIBRATION	Current Sub Assy. of: AC5/AC5M DC1000	Originator MP	Approved Date
---	---	------------------	---------------

### Step 3: Saving The Calibration

When the calibration process is complete, the “POT” category becomes unhighlighted.

Press and hold the [One Dot] key, then press the [Stop] key and release both keys. The console will then save the calibration results and reset to the main screen.

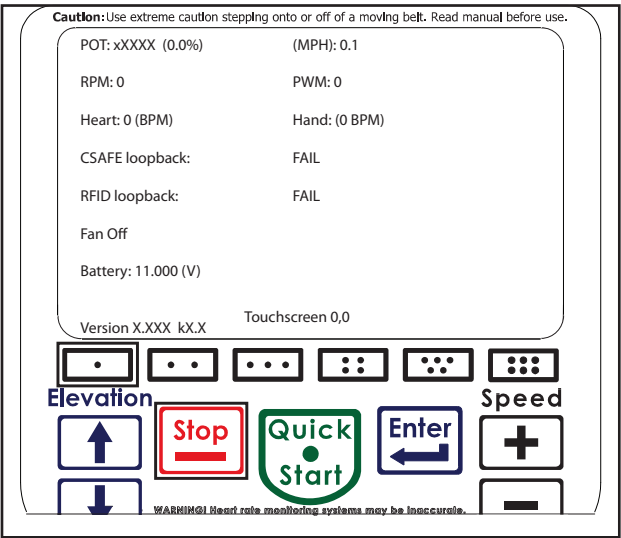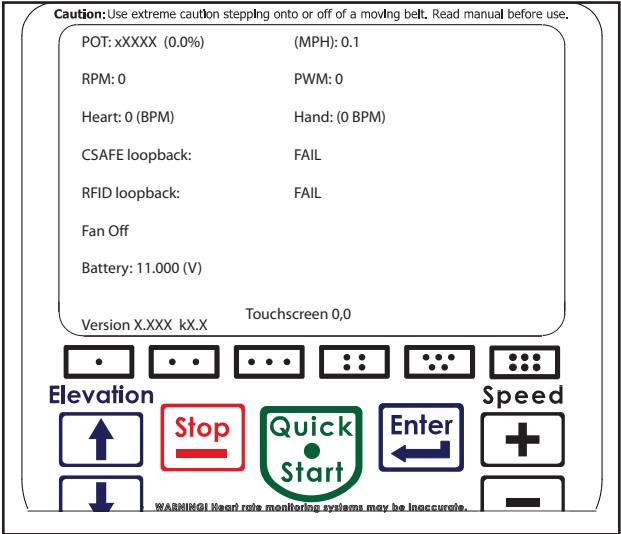

Machine model type and elevation calibration are now complete and the machine is ready for use.